

HANASIS MICUS7/10

MSR(HM-100U) MANUAL





Hanasis R&D
2011-05-16


- Contents -

1. MSR Utility Starting.....	3
2. MSR Utility Menu.....	4
3. MSR Setting Value Initialization.....	5
4. MSR Setting Value Change.....	6
5. When use OPOS Driver(Hanasis)	6

1. MSR Utility Starting

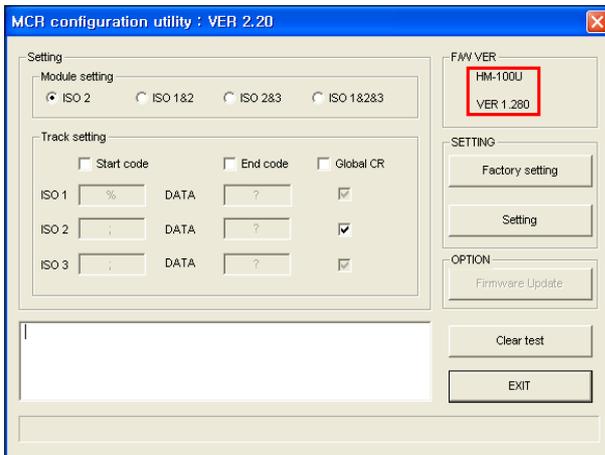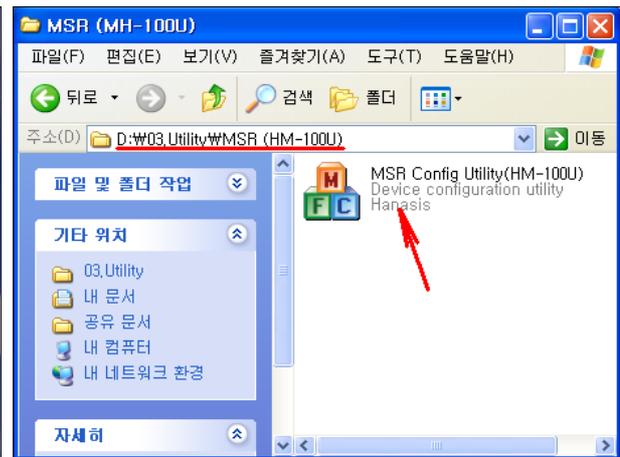


[When MSR is connected]

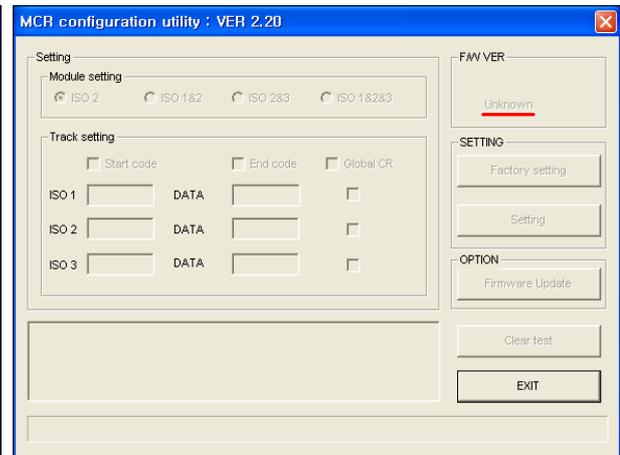


[When no MSR]

- 1) Double-click the "MSR Config Utility V2.20.exe".
- 2) Then, the MSR utility window is opened.
- 3) If MSR is connected, the model name, F/W version and current setting values are uploaded and displayed.
- 4) If no MSR or problem with connection, "Unknown" message is displayed.


3. MSR Setting Value Initialization

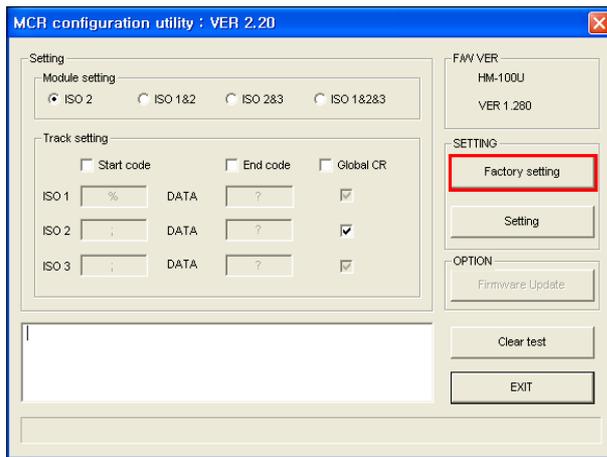


[STEP-01]

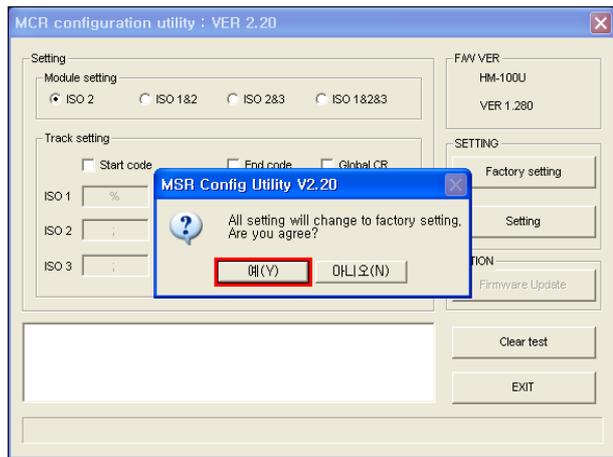

[STEP-02]

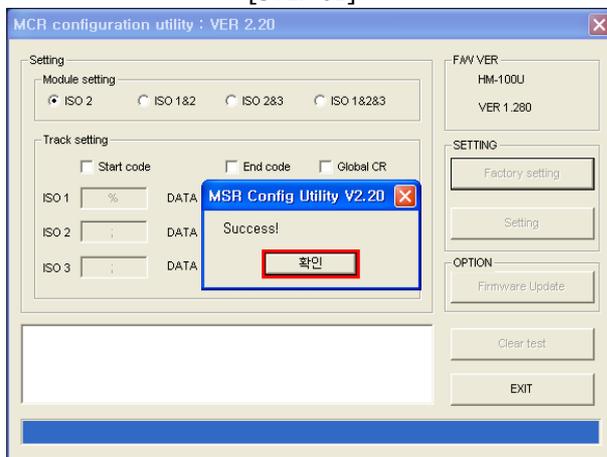

[STEP-03]

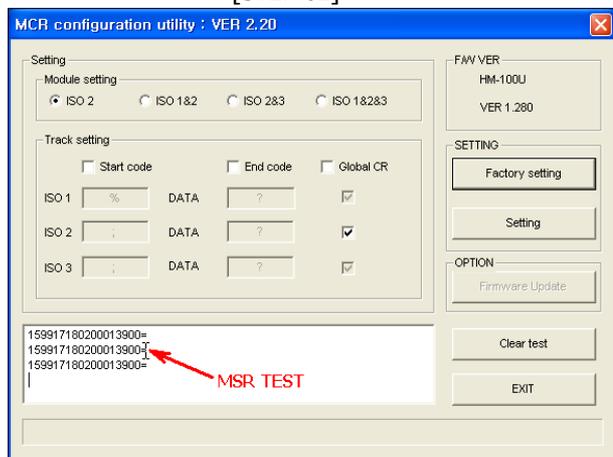


[STEP-04]

1) Click the "Factory setting" button. Then all values are initialized.


2) Each initial values are below:

- ① Module Setting : ISO2
- ② Track Setting
 - Start code : Unchecked
 - End code : Unchecked
 - Enter : Checked (ISO#2 only)
 - Global CR : Unchecked


4. MSR Setting Value Change

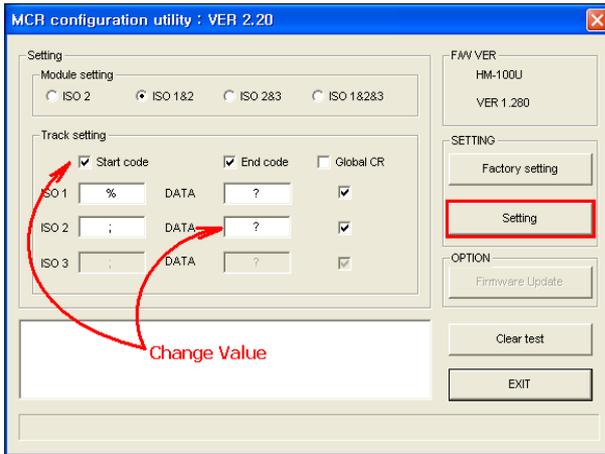

[STEP-01]

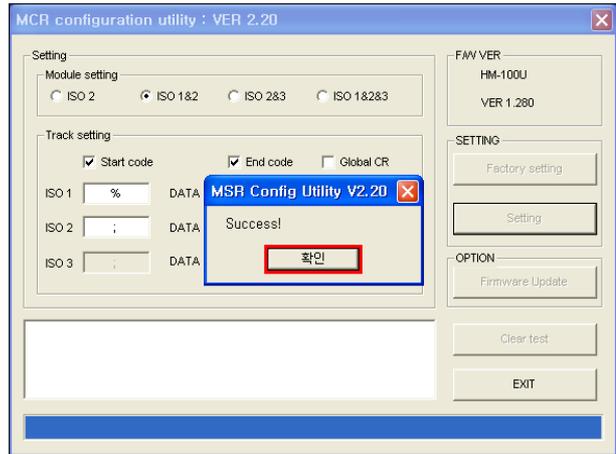


[STEP-02]

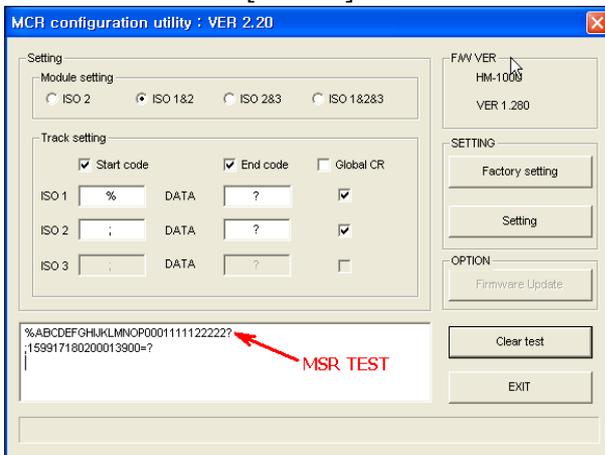

[STEP-03]

1) After changing the value, click the "Setting" button. Then the value is sent to MSR.

5. When use OPOS Driver(Hanasis)

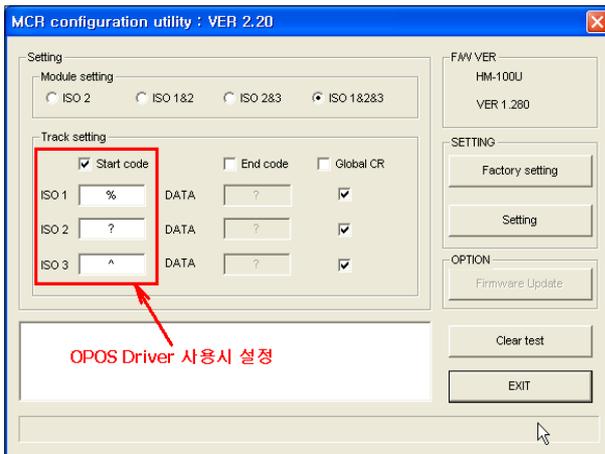

[START CODE]
 ISO1 : %
 ISO2 : ?
 ISO3 : ^

1) If you use the hanasis OPOS Driver, the start codes have to be changed like above characters.